


IMPORTANT EXTRA FITMENT.

We have found an issue with these Rumbux crash bars. The front brake pipes & ABS cable in front of the radiator touches the Rumbux stabilizer bar in front of the radiator under braking and in off road use. For safety reasons we have included x2 Spiral sleeves to protect these pipes from any damage.

Step 1: Remove the X3 upper clips on the left-hand brake pipe in the pictures below.

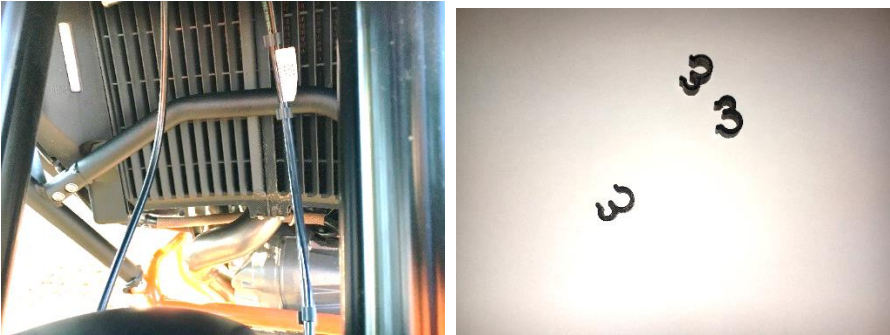

Step 2: Starting with the right-hand side, overlapping the plastic at the top by 15mm as seen in the pictures below. Secondly, wrap the left-hand side making sure the tubes run side by side. Start the same as the left-side with 15mm overlap at the top.



The finished product can be seen in the picture below.

